




Monthly Test: Cylinder Inspection v2.0

<ul style="list-style-type: none"> If attached: remove the cylinder from the BA set 	
<ul style="list-style-type: none"> Examine the cylinder bracket, and connectors on the back-plate, for damage or wear 	
<ul style="list-style-type: none"> Select cylinder to be attached to set (<i>note: this can be the one removed to check the backplate</i>) 	
<ul style="list-style-type: none"> Ensure cylinder contents \geq 290bar 	
<ul style="list-style-type: none"> Check cylinder jacket for signs of excessive wear or tear 	
<ul style="list-style-type: none"> Ensure, where fitted, Velcro entanglement strap is in good condition, and that the Velcro itself functions correctly 	
<ul style="list-style-type: none"> Remove the cylinder jacket and inspect cylinder body for damage (any deformity or exposure to carbon layer must be defected) 	
<ul style="list-style-type: none"> Ensure cylinder is within date of first retest by inspecting cylinder label (<i>Fig. 1</i>). If cylinder is in use beyond this date – Check cylinder for presence of an in-date re-test sticker similar to that in <i>Fig. 2</i> or <i>Fig. 3</i>. If in doubt – remove cylinder from use until appropriate documentation can be located. 	
<ul style="list-style-type: none"> Also, check that cylinder is within date of final use (<i>fig. 4</i>) – it MUST NOT be used after this date. 	

(Fig. 1) Date of First Re-Test

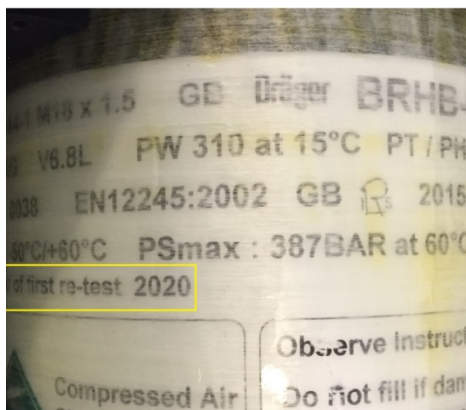


(Fig.3) Additional Re-Test Sticker Example

(Fig. 2) Re-Test Sticker



(Fig.4) Date of Final Use



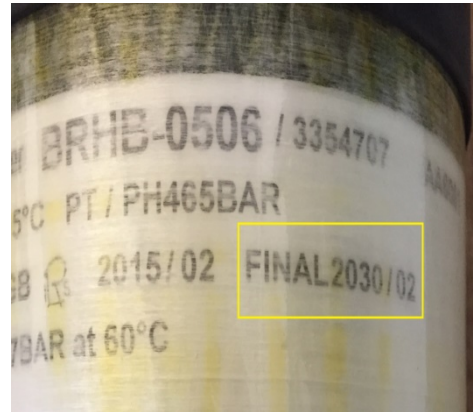

Monthly Test: Cleaning and Fitting Cylinder

<ul style="list-style-type: none"> • Conduct relevant cleaning 	
<ul style="list-style-type: none"> • Ensure cylinder valve is free from debris 	
<ul style="list-style-type: none"> • Refit cylinder jacket 	
<ul style="list-style-type: none"> • Ensure bronze cintered filter and O-ring on cylinder connector on the BA set are in-place and free from damage. 	
<ul style="list-style-type: none"> • Connect cylinder, ensuring the connection is finger-tight, and that, where fitted, anti-entanglement straps have also been refitted 	
<ul style="list-style-type: none"> • Now conduct a full inspection and test of the BA set, as per the Daily Test procedure 	

Name	Date	Pass/ Fail	Signature





Comments:

Student Name	Date	Trust	Signature

